

1150. SGV « STEEL GRIT VALVE »

The SGV Steel Grit Valve is suitable for aggressive metallic abrasives such as chilled iron, steel and aluminium oxide. Replaceable liner for long valve life.



Rubber pipe replacement

The rubber piping inside the SGV metering valve is subjected to abrasion and wear during blast operation, and must be replaced when worn. To replace the rubber piping, loosen cap screws on upper flange (4) and disconnect the SGV valve from the blast machine. Loosen nuts (7) from cap screws (5) on bottom flange (2), and release the SGV valve from flange. Loosen nuts (8) from cap screws (6) and pull the valve open. Remove and replace the old rubber pipe.

Reassemble SGV valve and blast machine in reverse order.

