## 1509. ABRASIVE MEMBRANE VALVE 1"1/4

The Abrasive Membrane Valve1"1/4 is used to provide precise metering of the abrasive.

It is especially suited for harsh abrasives such as corundum, steel shot and grit.

An easily replaceable membrane, ensuring its longevity.

## 1510.







